

Molecular Cell, Volume 56


Supplemental Information

**The Protein Targeting Factor Get3 Functions as ATP-Independent Chaperone
under Oxidative Stress Conditions**


Wilhelm Voth, Markus Schick, Stephanie Gates, Sheng Li, Fabio Vilardi, Irina Gostimskaya,
Daniel R. Southworth, Blanche Schwappach, and Ursula Jakob

Figure S1


A

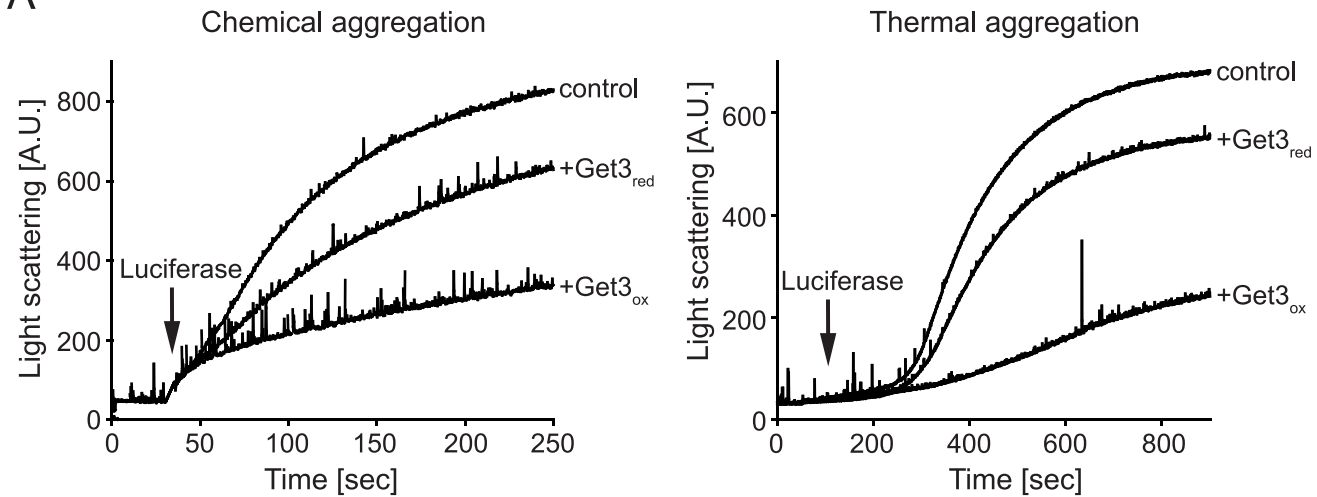

B

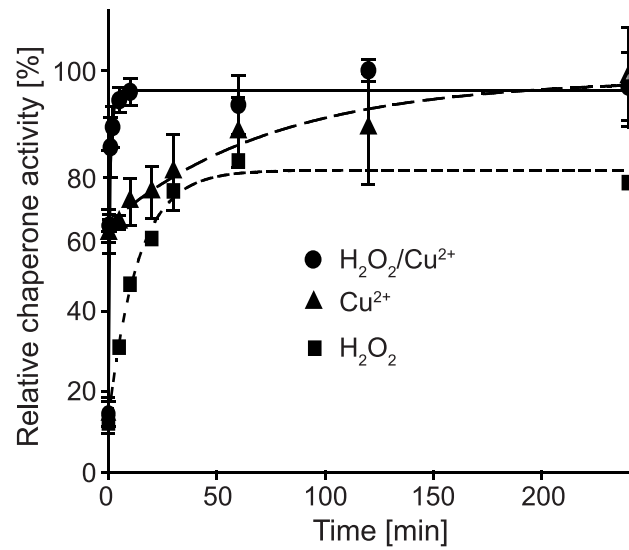

C

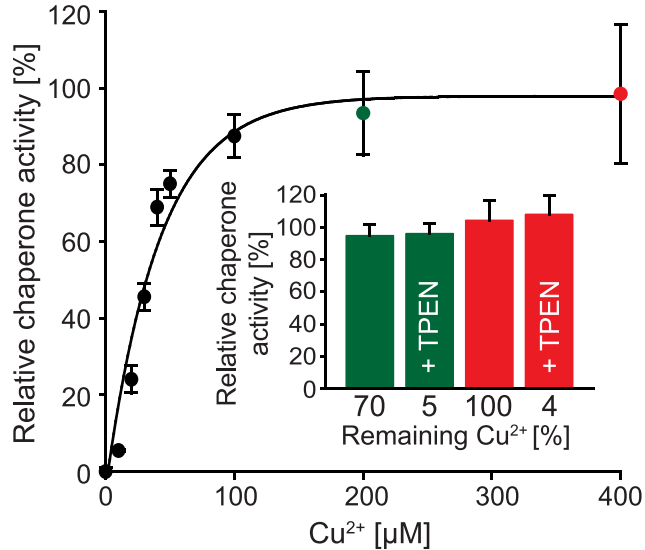

D

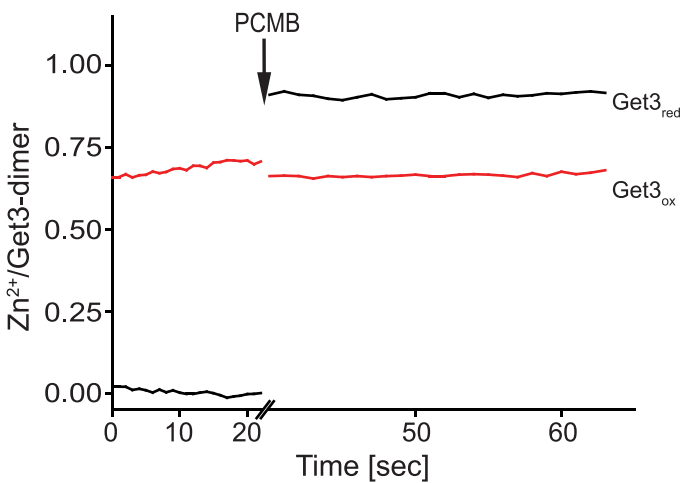


Figure S1 (associated with Figure 1). Get3 functions as chaperone when oxidized.

A. Effect of Get3_{red} or Get3_{ox} on the light scattering of chemically denatured luciferase (Get3:luciferase ratio 8:1) or thermally unfolding luciferase at 43°C (Get3:luciferase ratio 1:1). Light scattering of luciferase in the absence of added chaperones is shown (control). **B.** The chaperone function of 0.3 μM Get3_{red} before and at defined time points after incubation in either 2 mM H₂O₂/50 μM Cu²⁺ (circles), 50 μM Cu²⁺ (triangles) or 2 mM H₂O₂ (squares) at 37°C was determined by analyzing the influence of Get3 on the aggregation of 0.075 μM chemically denatured citrate synthase (CS). The light scattering signal of CS in the absence of added chaperones was set to 0% chaperone activity, whereas the light scattering signal in the presence of fully oxidized Get3 was set to 100%. **C.** The chaperone function of 0.3 μM Get3_{red} before and 4 min after addition of various concentrations of copper at 37°C was analyzed as described. Insert: Get3_{red} that was incubated in either 200 μM CuCl₂ (green bars) or 400 μM CuCl₂ (red bars) for 4 min was either incubated with a 100-fold excess of the copper chelator TPEN for 10 min or left untreated. The samples were then loaded onto gel filtration columns equilibrated with metal-free buffer and tested for their remaining copper content by ICP analysis. The same samples were tested for their chaperone activity as described above. At least 3-6 replicates were performed and the standard error is shown. **D.** Oxidation of Get3 causes zinc release. Reduced and oxidized Get3 (2 μM) were incubated in the presence of 100 μM 4-(2-pyridylazo)resorcinol (PAR), which forms bright red complexes with zinc. PAR is unable to compete with high affinity sites, like cysteine-coordinating zinc centers for zinc binding. Addition of parachloromercuribenzoic acid (PAR/PCMB) leads to thiol-mercaptide bond formation which releases

cysteine-coordinated metal that now interacts with PAR. Signal from surface-attached metal was subtracted from the baseline.

Figure S2


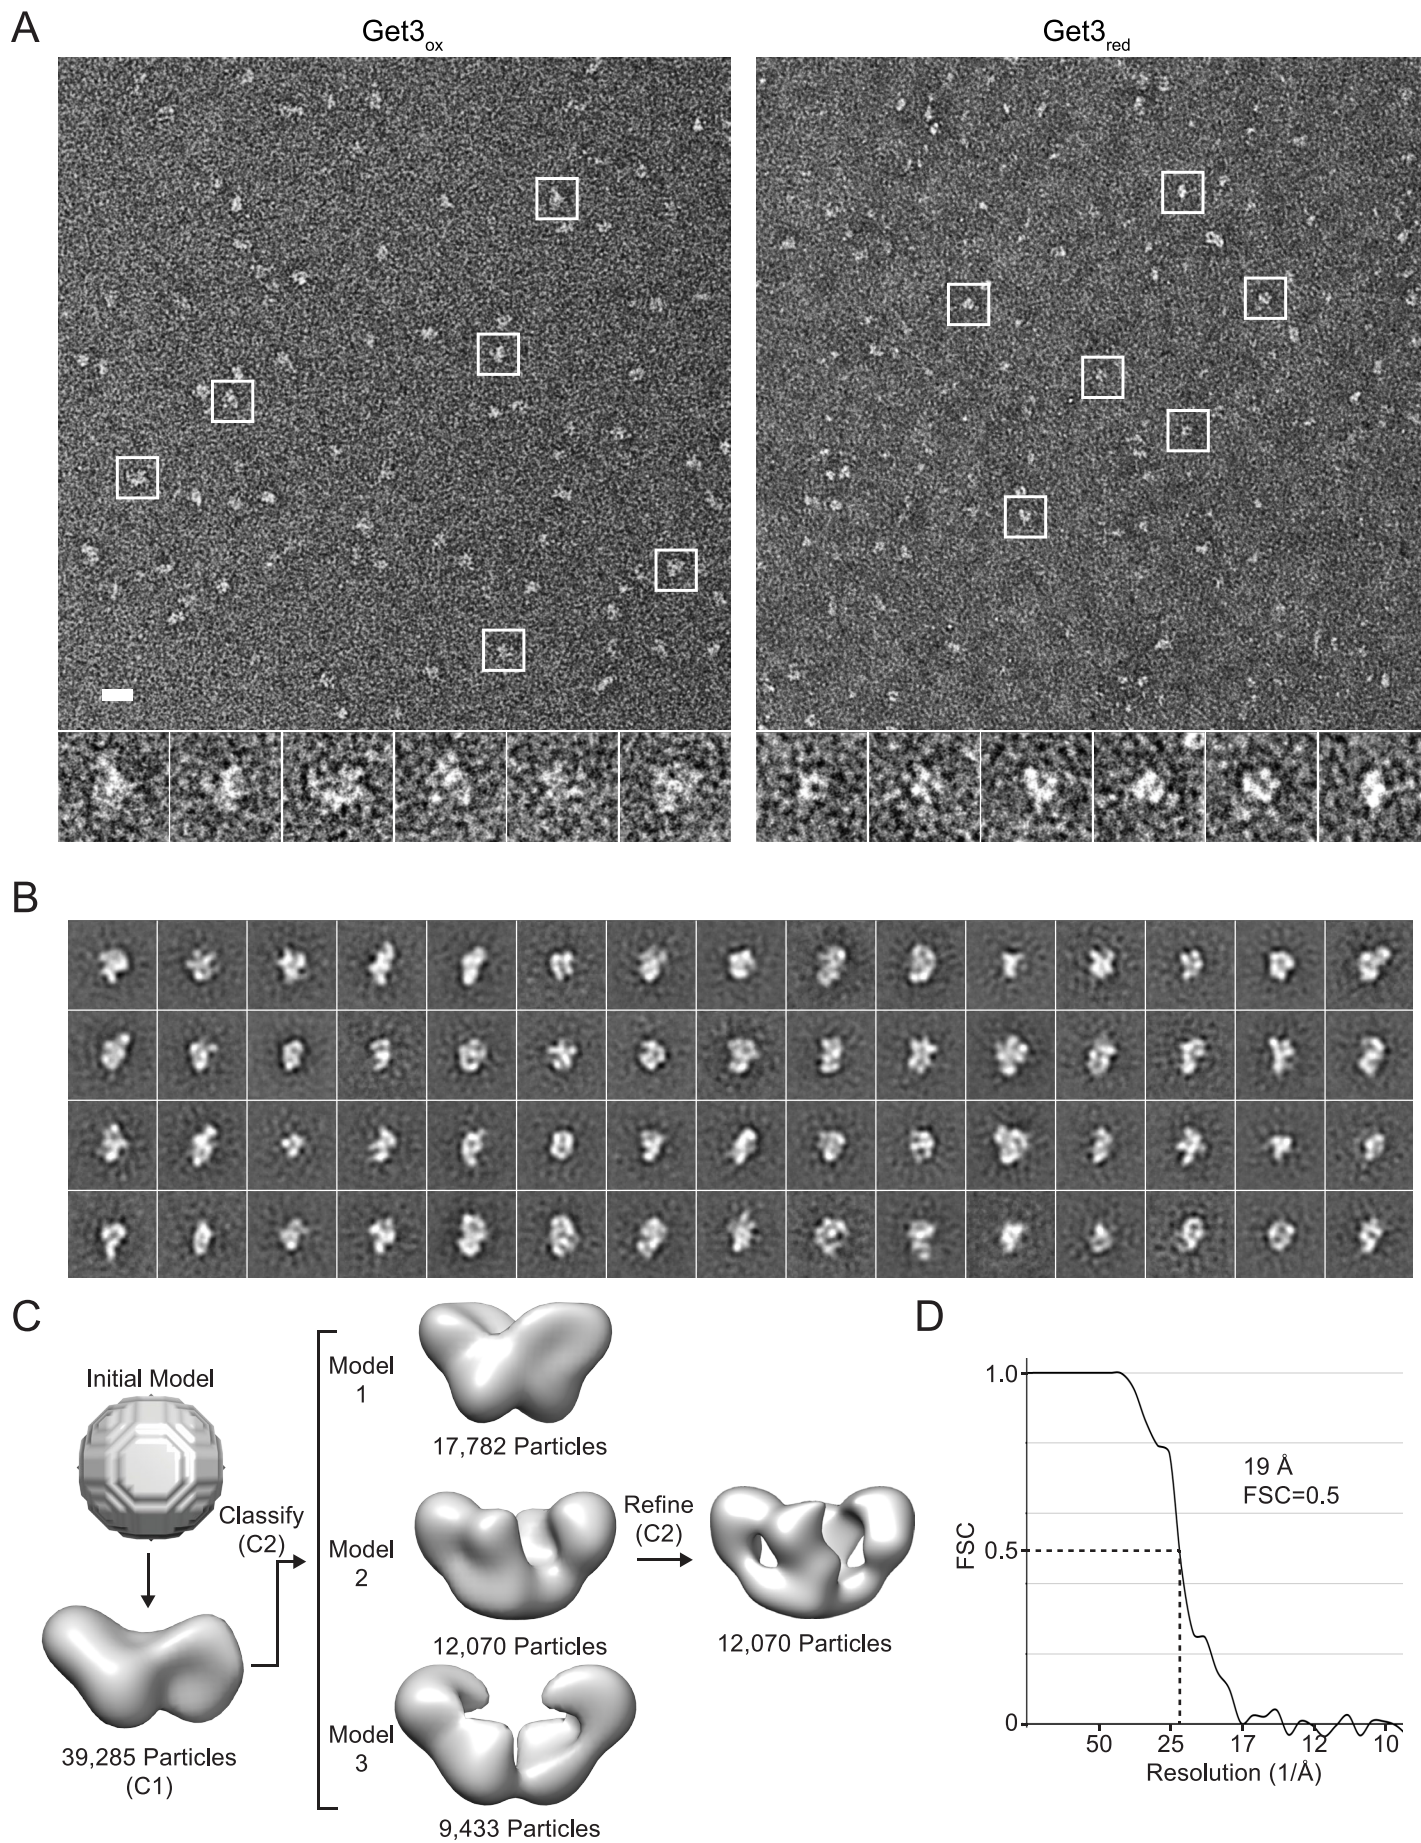


Figure S2 (associated with Figure 3). Negative-stain EM and 3D reconstruction.


A. Representative micrograph images and selected particles of Get3_{ox} (left panel) and Get3_{red} (right panel) are shown. Scale bar equals 200 Å and the box size is 260 Å. **B.** Representative reference-free class averages of Get3_{ox}, generated using SPIDER (Frank et al., 1996). **C.** 3D reconstruction method and **D.** gold-standard Fourier Shell Correlation (FSC) curve of the final refinement showing a 19Å resolution at an FSC=0.5 criterion, performed using RELION (Scheres, 2012).

Figure S3

A

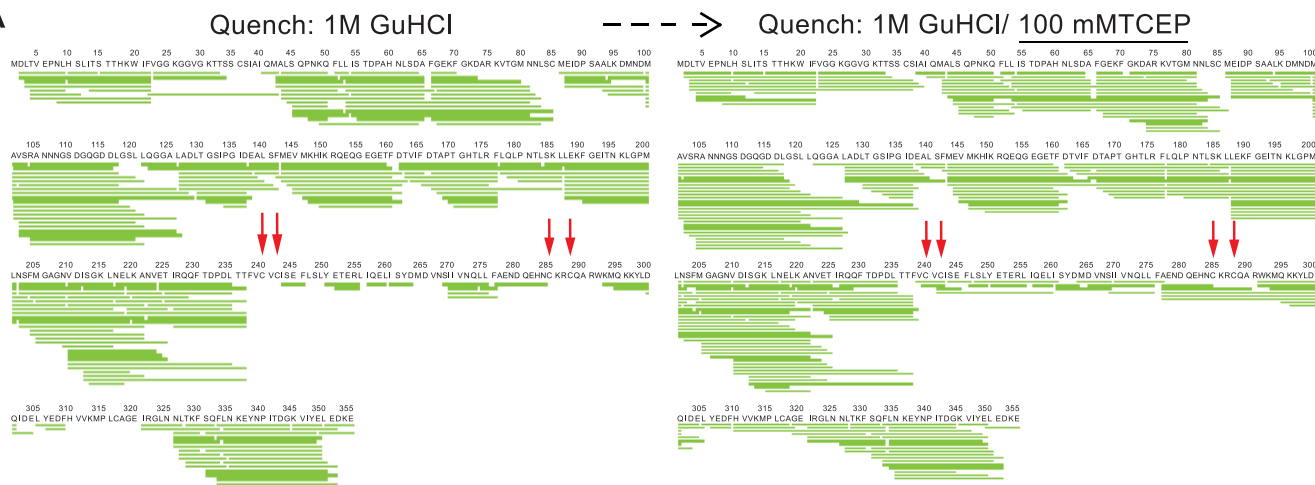

B

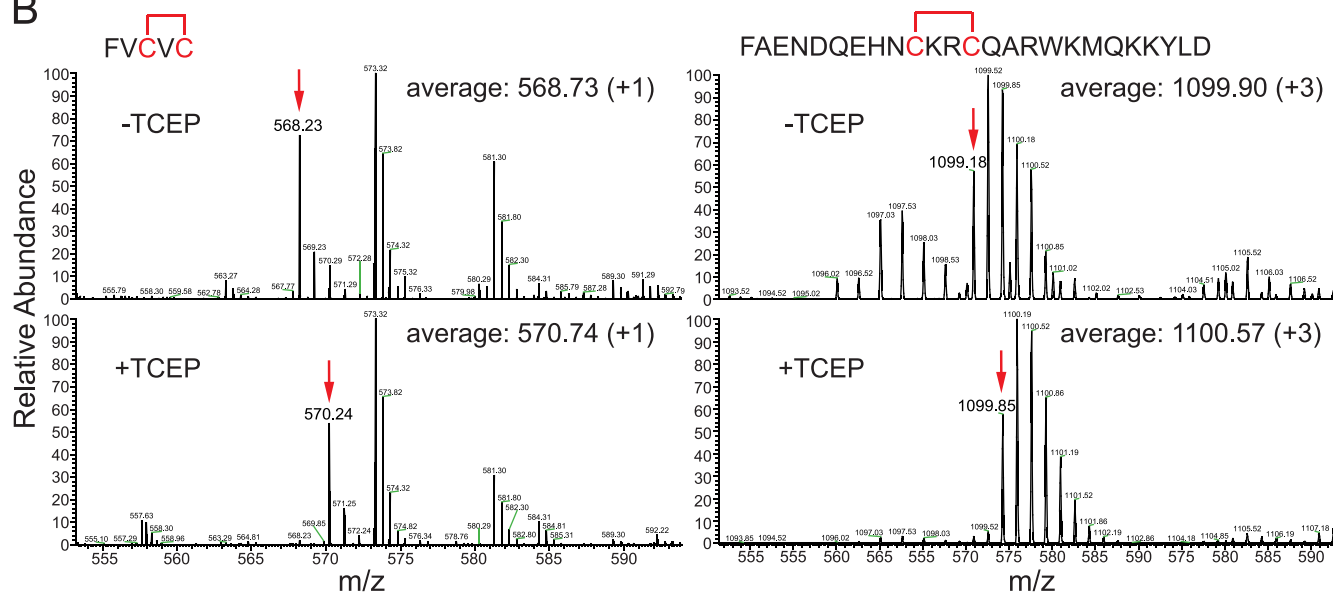

C


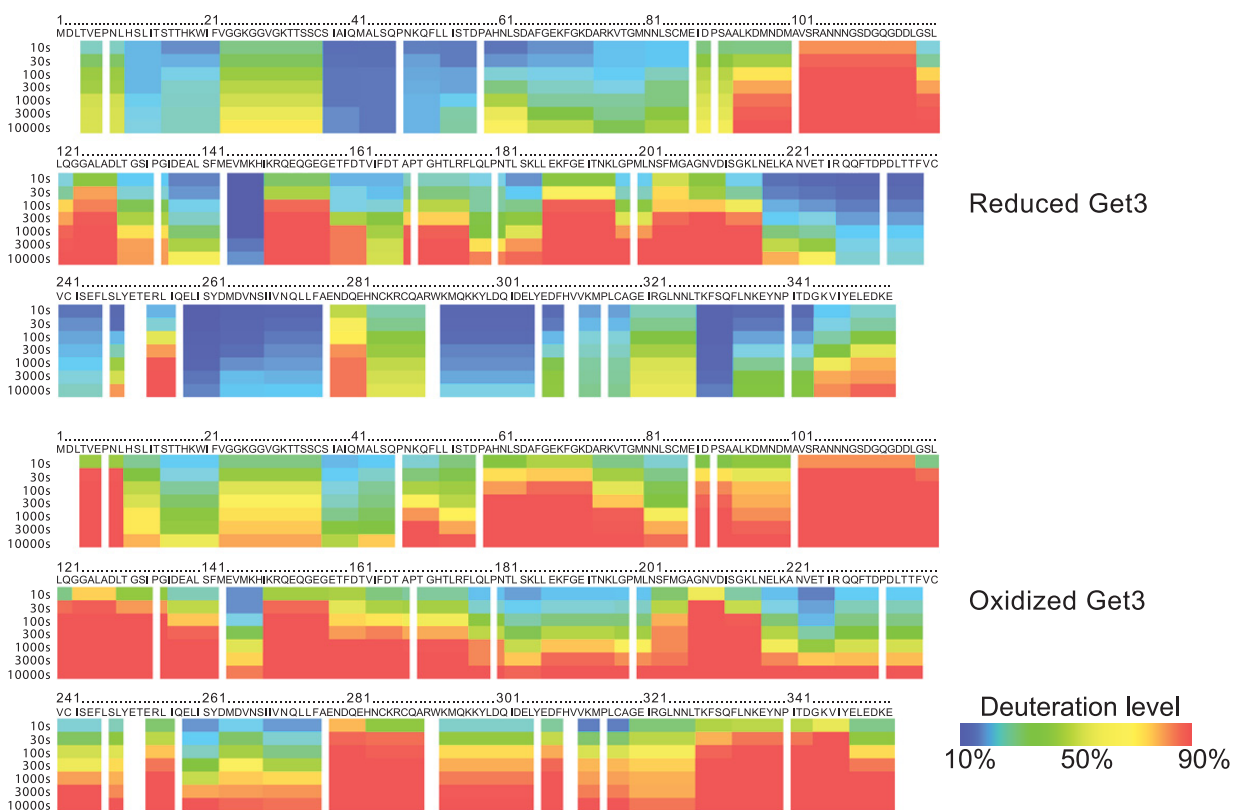



Figure S3 (associated with Figure 4). Oxidative stress mediated disulfide bond formation and conformational rearrangements of Get3. **A.** Pepsin digest of Get3_{ox} in the absence of reducing agents revealed significant differences in the patterns of proteolytic cleavage surrounding the two pairs of conserved cysteines (red arrows). However, quenching in the presence of 100 mM TCEP, a thiol reductant, reconstituted the cleavage pattern of Get3_{red}. **B.** MS spectra for Get3 peptides containing the CXC- and CXXC-motif with and without TCEP reveal disulfide bond formation within the peptide chain. The calculated mass of the first monoisotopic peaks (red arrow) in both peptides shows a mass increase of ~ 2 Da upon addition of the reducing agent TCEP, consistent with the reduction of one disulfide bond. **C.** Deuterium incorporation into peptides of Get3_{red} and Get3_{ox} after quenching and pepsin digest in the presence of 100 mM TCEP. The deuteration level was calculated as described in the experimental procedures.

Figure S4

A

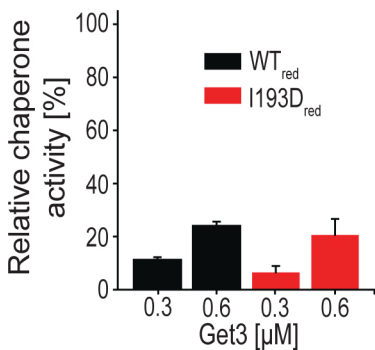

B

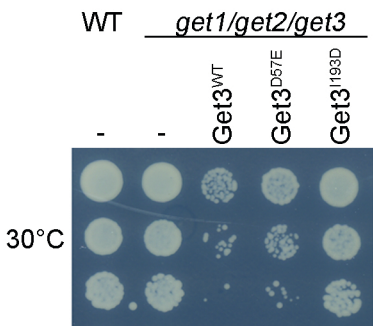

C

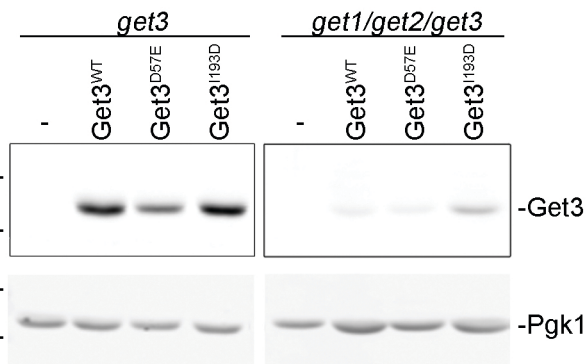


Figure S4 (associated with Figure 5 and 6). TA-binding function and chaperone

function can be separated *in vivo*. **A.** Both wild-type Get3 and the tail-anchored

binding deficient mutant Get3I193D were prepared in their reduced form and tested for

their influence on the aggregation behavior of chemically denatured CS (see figure

legend 1 for details). **B.** Serial dilutions of *get1/get2/get3* cells, transformed with

constructs containing the coding sequence of Get3 variants, were spotted and grown at

30°C. **C.** *get3* and *get1/get2/get3* cells were transformed with constructs containing the

coding sequence of wt or mutant Get3 variants. Protein lysates were analyzed by

immunoblot using a Get3 specific serum. Pgk1 was used as loading control.

Supplemental Table S1 (associated with Figure 4)**Supplemental Table S2 (associated with Figure 5 and 6)*****E. coli* and *S. cerevisiae* strains used in this study**

Strain	Genotype	Background	Ref.*
E. coli BL21 DE3	F- <i>ompT gal dcm lon hsdSB(rB- mB-)</i> λ (DE3 [<i>lacI lacUV5- 7 gene 1 ind1 sam7 nin5</i>])		Novagen
BY4741	MATa <i>his3Δ1 leu2Δ0 met15Δ0 ura3Δ0</i>	S288C	1
<i>get3</i>	MATa <i>his3Δ1 leu2Δ0 met15Δ0 ura3Δ0 ydl100c::KanR</i>	BY4741	2
<i>get1/get2/get3</i>	MATa <i>his3Δ1 leu2Δ0 met15Δ0 ura3Δ0 get1::KanR, get2::NatR, get3::PhleoR</i>	BY4741	3

Plasmids used in this study

Name	Description	Marker	Ref.*
pJ488	pQE80-10His-ZZ-Get3	Amp	4
pAA1349	pQE80-10His-ZZ-Get3 ^{D57E}	Amp	5
pAD1474	pet280 Get3 ^{I193D}	Kan	6
pG307	p416Met25-Get3 ^{WT}	Ura	5
pG309	p416Met25-Get3 ^{D57E}	Ura	5
ppG310	p416Met25-GFP-Get3 ^{WT}	Ura	5
pG308	p416Met25-GFP-Get3 ^{D57E}	Ura	5
pAA1307	p415Met25-mCherry-Sed5	Leu	5
pX1157	p413Met25-GFP-Sed5	His	5
pAF1558	p416Met25-Get3 ^{I193D}	Ura	this study
pAF1559	p416Met25-GFP-Get3 ^{I193D}	Ura	this study

*1(Brachmann et al., 1998); 2(Jonikas et al., 2009); 3(Schuldiner et al., 2008); 4(Metz et al., 2006); 5(Powis et al., 2013); 6(Mateja et al., 2009)

Supplemental Material and Methods

Plasmids construction - For p416Met25-Get3^{I193D}, the coding sequence of Get3^{I193D} was amplified by PCR from pLAC33-Get3^{I193D} (Mateja et al., 2009) using the primers 5'-TATGATACTAGTATGGATTAAACCGTGGAA-3' and 5'-ATCATACTCGAGCTATTCCTTATCTTCTAA-3' containing SpeI and XhoI restriction sites, respectively. For p416Met25-GFP-Get3^{I193D}, a SpeI/BamHI fragment was originated from p416Met25-Get3^{I193D} and ligated to p416Met25-GFP-Get3^{WT} previously digested with the same restriction endonucleases.

Get3 Purification - Get3 wild-type and the D57E mutant were expressed in *E. coli* Rosetta2(DE3)/pLysS (Novagen) from a pQE80 derivative as a fusion of two Z domains (IgG-binding domain of protein A) to Get3 (Metz et al., 2006) containing a tobacco etch virus (TEV) protease cleavage site between an N-terminal 6xHis tag in front of the Z domain and the polylinker. Get3^{I193D} was expressed from a pet280 vector (kind gift of Robert Keenan) containing a TEV protease cleavage site between the N-terminal 6xHis tag and a polylinker. After cells reached an A_{600} of ~0.6, protein expression was induced with 0.4 mM IPTG and cells were cultivated for another 4 h at 30 °C. The cells were pelleted and resuspended in extraction buffer (50 mM Tris, 50 mM NaCl, 2 mM MgAc, 1 mM imidazole, optional 2 mM DTT, pH 7.5), supplemented with one tablet of protease inhibitor (Roche) and 1 mM PMSF (Sigma Aldrich). Cells were lysed using a commercial French press (3 x 1300 psi). The cleared lysate was purified by a nickel-NTA column (QIAGEN). For further purification an anion-exchange chromatography column (Q-sepharose HP, GE Healthcare) was used. The purified protein was simultaneously cleaved with 6xHis-tagged TEV protease and dialyzed for 20 h at 4°C against cleavage

buffer (50 mM Tris, 50 mM NaCl, pH 7.5) containing 0.5 mM DTT and 0.5 mM EDTA. Uncleaved Get3 and the 6xHis-tagged TEV protease was removed by subtractive Ni-NTA purification. The efficiency of cleavage was quantified by SDS-PAGE and was >90%. Get3 concentrations were determined spectroscopically using a Jasco spectrophotometer V-550.

Chaperone activity assays - 12 μ M CS was denatured in 40 mM HEPES, 6 M guanidine hydrochloride (Gdn-HCl), pH 7.5 overnight at RT. To initiate protein aggregation, chemically denatured CS was diluted to a final concentration of 0.075 μ M into 40 mM HEPES, pH 7.5 at 30°C under continuous stirring. The maximum in light scattering signal was reached after 4 min of CS incubation and was set to 0% chaperone activity. To determine the effect of Get3 on CS aggregation, Get3 was diluted into the buffer and light scattering was monitored after addition of chemically denatured CS using a Hitachi F4500 fluorescence spectrophotometer equipped with a temperature-controlled cuvette holder and stirrer. Excitation and emission wavelengths were set to 360 nm. To monitor the activation and inactivation kinetics of Get3, the protein was incubated with the respective oxidants or reductants as described. At defined time points, aliquots were taken and Get3 was diluted to a final concentration of 0.3 μ M into assay buffer. Chaperone activity measurements were monitored as described.

EM Sample imaging and analysis - Samples were imaged under low dose conditions using a G2 Spirit TEM (FEI) operated at 120 keV. Micrographs were taken at 52,000x magnification with 2.16 Å per pixel using a 4k x 4k CCD camera (Gatan). Single particles were selected using E2boxer in EMAN2 (Tang et al., 2007) and totaled 39,285 for Get3_{ox} and 7,731 for Get3_{red}. Reference free 2D classification and analysis of Get3

was performed using SPIDER (Radermacher et al., 1987) and generated 400 classes for Get3_{ox} and 100 classes for Get3_{red}. 3D refinement was performed using RELION (Scheres, 2012) by first running '3D classification' on the entire data set, binned two-fold, using a sphere as an initial model and no imposed symmetry (Figure S2C). The resulting model was used for an additional 3D classification involving 20 rounds with 3 classes and two-fold symmetry imposed, using the entire un-binned dataset. The best model, based on similarity to the reference-free 2D averages (Figure 3D), was subjected to additional refinement, using '3D Refine' with two-fold symmetry and converged after 9-rounds, calculated to be 19 Å by the 'gold-standard' Fourier shell correlation procedure (Figure S2D) (Scheres, 2012). Additional symmetries were tested, however only the two-fold remained consistent with the asymmetric model and the 2D averages (data not shown).

Hydrogen/Deuterium exchange experiments combined with mass spectrometry - The H/D exchange experiments were initiated by diluting 45 µl of reduced Get3_{red} (~36 µM) or Get3_{ox} (~32 µM) with 135 µl of D₂O buffer (8.3 mM Tris, 50 mM NaCl, in D₂O, pD_{READ} 7.2) at 0°C. At 10, 30, 100, 300, 1000, 3000, and 10000 sec, 24 µl of the reaction were removed and quenched by adding 36 µl of optimized quench buffer (1.0 M Gdn-HCl, 100 mM TCP, 0.8 % formic acid, 16.6 % v/v glycerol) at 0°C. The quenched samples were incubated on ice for 5 min, and then frozen at -80°C. In addition, non-deuterated control samples (incubated in non-deuterated D₂O buffer) and equilibrium-deuterated back exchange control samples (incubated in D₂O buffer containing 0.5% formic acid overnight at 25°C) were prepared.

Analysis of plasmid-induced Get3 expression levels –1 ml of mid-log phase yeast

culture was pelleted by low speed centrifugation, resuspended in 0.1 M NaOH and incubated for 10 min at room temperature. Cells were recovered by centrifugation and dissolved in 1X SDS loading buffer. 10 µl of lysate per lane were separated by SDS-PAGE and analyzed by immunoblot using a mouse monoclonal antibody against Pgk1 (Molecular Probes) or a guinea pig serum against Get3 (Metz et al., 2006).

Supplemental References

Brachmann, C.B., Davies, A., Cost, G.J., Caputo, E., Li, J., Hieter, P., and Boeke, J.D. (1998). Designer deletion strains derived from *Saccharomyces cerevisiae* S288C: a useful set of strains and plasmids for PCR-mediated gene disruption and other applications. *Yeast* **14**, 115-132.

Frank, J., Rademacher, M., Penczek, P., Zhu, J., Li, Y., Ladjadj, M., and Leith, A. (1996). SPIDER and WEB: processing and visualization of images in 3D electron microscopy and related fields. *J Struct Biol* **116**, 190-199.

Jonikas, M.C., Collins, S.R., Denic, V., Oh, E., Quan, E.M., Schmid, V., Weibezahn, J., Schwappach, B., Walter, P., Weissman, J.S., *et al.* (2009). Comprehensive characterization of genes required for protein folding in the endoplasmic reticulum. *Science* **323**, 1693-1697.

Mateja, A., Szlachcic, A., Downing, M.E., Dobosz, M., Mariappan, M., Hegde, R.S., and Keenan, R.J. (2009). The structural basis of tail-anchored membrane protein recognition by Get3. *Nature* **461**, 361-366.

Metz, J., Wachter, A., Schmidt, B., Bujnicki, J.M., and Schwappach, B. (2006). The

yeast Arr4p ATPase binds the chloride transporter Gef1p when copper is available in the cytosol. *The Journal of biological chemistry* **281**, 410-417.

Powis, K., Schrul, B., Tienson, H., Gostimskaya, I., Breker, M., High, S., Schuldiner, M., Jakob, U., and Schwappach, B. (2013). Get3 is a holdase chaperone and moves to deposition sites for aggregated proteins when membrane targeting is blocked. *J Cell Sci* **126**, 473-483.

Radermacher, M., Wagenknecht, T., Verschoor, A., and Frank, J. (1987). Three-dimensional reconstruction from a single-exposure, random conical tilt series applied to the 50S ribosomal subunit of *Escherichia coli*. *J Microsc* **146**, 113-136.

Scheres, S.H. (2012). RELION: implementation of a Bayesian approach to cryo-EM structure determination. *J Struct Biol* **180**, 519-530.

Schuldiner, M., Metz, J., Schmid, V., Denic, V., Rakwalska, M., Schmitt, H.D., Schwappach, B., and Weissman, J.S. (2008). The GET complex mediates insertion of tail-anchored proteins into the ER membrane. *Cell* **134**, 634-645.

Tang, G., Peng, L., Baldwin, P.R., Mann, D.S., Jiang, W., Rees, I., and Ludtke, S.J. (2007). EMAN2: an extensible image processing suite for electron microscopy. *J Struct Biol* **157**, 38-46.